




TP-003 / GEU

MANUAL - Ver 2.01

EN

■ ITEMS INCLUDED

Please check the contents of the set before fully opening the tent. If you find something missing, please contact the store where you purchased it or us directly.

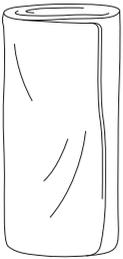

Tent body × 1



Main pole × 2



 
Side pole × 2




Tarp tale × 1




8m
Rope
× 2



3m
Rope
× 6

 

Rope case
× 1

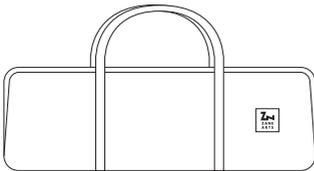

Carry bag × 1



Pole case × 1

※Peg · Hammer is not include

■ ABOUT THIS PRODUCT

Please take some time to understand the characteristics of this product before using it.

Pegs not include

Pegs not include, please prepare the following recommended pegs and the required number of pegs in advance.

【Recommend · Required Number】

● TO-518 / GRART STAKE 18 × 10

Waterproofing performance is reduced

The surface is treated with silicone water repellent, but after use, the water repellent performance will deteriorate and rain will eventually penetrate the fabric. Please note that the water repellency cannot be maintained long term. Waterproof performance of the back side is not affected, so even if water repellency deteriorates, there is no issue using it as it is.

Wrinkles caused by folding are noticeable

Commonly used chemically treated fibers used in tents, shelters and tarps are prone to creases. In particular, the fabric in this product has noticeable wrinkles due to the color, thickness, and surface processing of fabric. Please note that it does not affect performance in any way.

For 3 seasons of use

This product is not designed to withstand snowfall or low temperatures. Do not use in low temperatures where the zippers may freeze or in snow.

Never use near fire

Chemically treated fibers are used in the fabric of this product. Chemically treated fibers may liquefy when burned, the liquefied fabric may stick to skin and cause serious burns. Never bring fire close to tarps.

Do not remove the fire prohibition tag

Do not cut or remove the fire-prohibited tag sewn into the product. Products without a fire-prohibited tag cannot be guaranteed or repaired.

■ PRECAUTIONS FOR SETUP AND USE

Be sure to read and understand the following contents before use to prevent harm to the user and others, and damage to property.



DANGER

**INDICATES CONTENT THAT MAY RESULT
IN DEATH OR SERIOUS INJURY.**

- Fire is not allowed in tents, shelters, and tarps. It is extremely dangerous as there is a risk of fire, oxygen deficiency, carbon monoxide poisoning, etc. Do not use firearms and keep fire away from tents, shelters, and tarps.
- If the weather is bad, such as a typhoon or storm, or if you anticipate such weather, stop camping immediately.
- Do not set up in a place that is easily affected by wind or where there is a risk of falling rocks, avalanches, or rising water.



**INDICATES CONTENT THAT MAY CAUSE
INJURIES OR PROPERTY DAMAGE.**

WARNING

- Not for permanent use. If this product is set up permanently, it will deteriorate and be damaged in a short period of time due to the effects of ultraviolet rays and other elements.
- Set up on a flat surface with good drainage. Moisture and dirt can lead to deterioration, and rough terrain can lead to damage to product.
- Remove any items that may damage the product, such as rocks and branches, before setting up.
- When setting up the product, be sure to have two or more people, and pay attention to surroundings.
- Do not set up when the wind is strong. The main body may blow away or product may be damaged by the force of the wind.
- When setting up, be prepared for wind gusts and be sure that the main body and frame don't fly away by keeping your hands on the frame and main body while working.

- When extending poles or frames, make sure each section is inserted securely. Assembling the product incorrectly can lead to damage.
- When handling poles or frames, be careful not to hit or damage something around you and pay attention to your surroundings.
- After setup, secure the tent, shelter, and tarp to the ground with pegs and ropes to prevent them from being blown away by the wind.
- If the weather suddenly changes hold on to the product for as long as needed to keep it down.

■ PRECAUTIONS FOR TEARDOWN AND AFTER USE CARE

Be sure to read and understand the following contents before use to prevent harm to the user and others, and damage to property.

 


WARNING

INDICATES CONTENT THAT MAY CAUSE MINOR INJURIES OR PROPERTY DAMAGE.

- When taking down the product, be sure to have two or more people.
- Please take down the product in the reverse order of the setup. Not following the instructions properly may damage the product.
- When removing poles or frames, be careful not to hit or damage something around you and pay attention to your surroundings.

- When folding a frame or pole with a built-in cord (cord), begin folding from the center, this will reduce the wear on the bungee cord by not applying extra tension to the cord.



- After use, clean the fabric and allow it to dry thoroughly before storing. If it is stored with dirt or moisture uncleaned, it may cause colors to transfer or mold odors to form, and may cause the seam tape to come off and diminish its waterproofness.
- Frames, poles, and other metal parts should also be thoroughly dried before storage. If stored while moist or uncleaned, they may be damaged by corrosion.
- Salt can accelerate the deterioration of fabrics. If used near the sea, rinse with fresh water and dry well before storing.
- Use a soft towel to gently clean or wipe moisture off fabrics. Rubbing can damage the coating of the fabric.
- Do not use solvents such as paint thinners. There is a risk of delaminating or discoloration of the water-repellent finish.
- Please do not wash. It will lead to deterioration of the fabric and damage to other parts.
- Please keep out of reach of infants and children.

■ SETUP PROCEDURES


Set up according to the numerical order.

【Prepare in Advance】

※Ready Pegs and Hammer


Recommned pegs > TO-528 / GRART STAKE 18 × 10

※Close all zippers

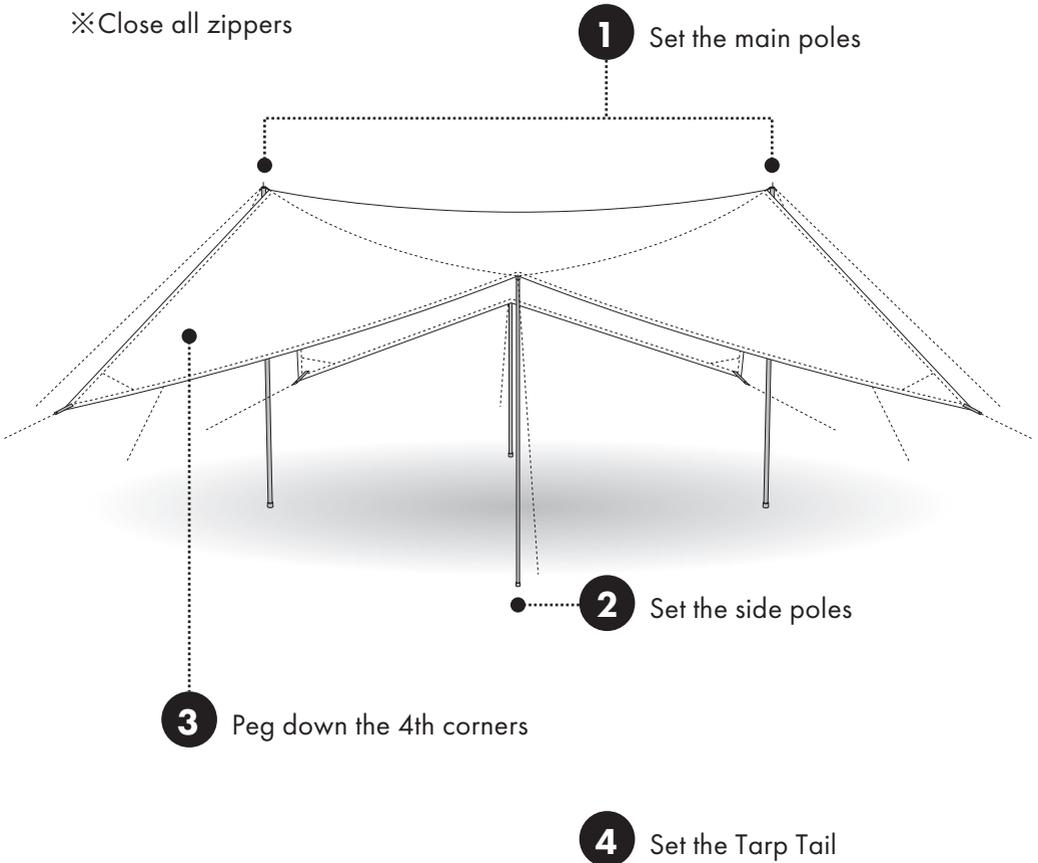

1 SETTING MAIL POLE

- A: Spread the tarp out (on the ground) where you plan to set up.
- B: Place the two main poles on the ground extending from the center line.
- C: Insert the tip of the main pole into the triangular bracket and loop rope around the tip.
- D: Adjust the rope tensioners so the rope length is roughly the length of the main poles.

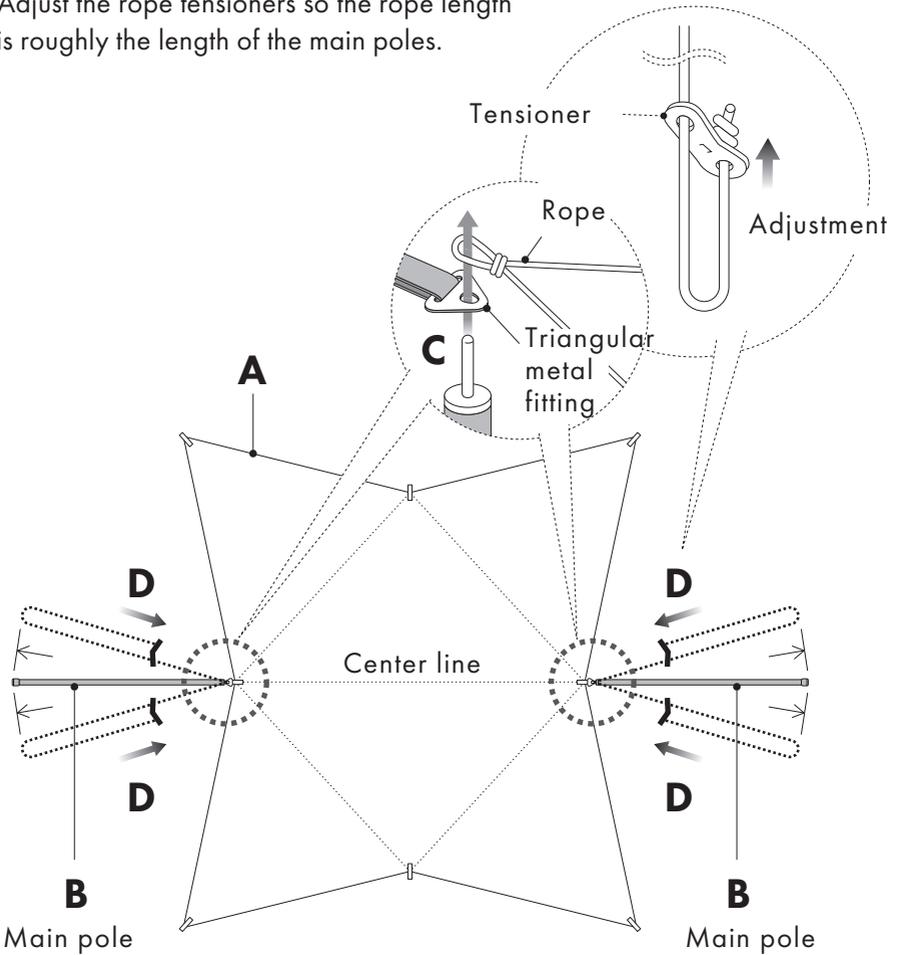


1 SETTING MAIL POLE

E: Lay the ropes out at 45 degree angles.

F: Drive tent pegs into the ground.

G: Before pitching the main poles,
loosen the rope tensioners.

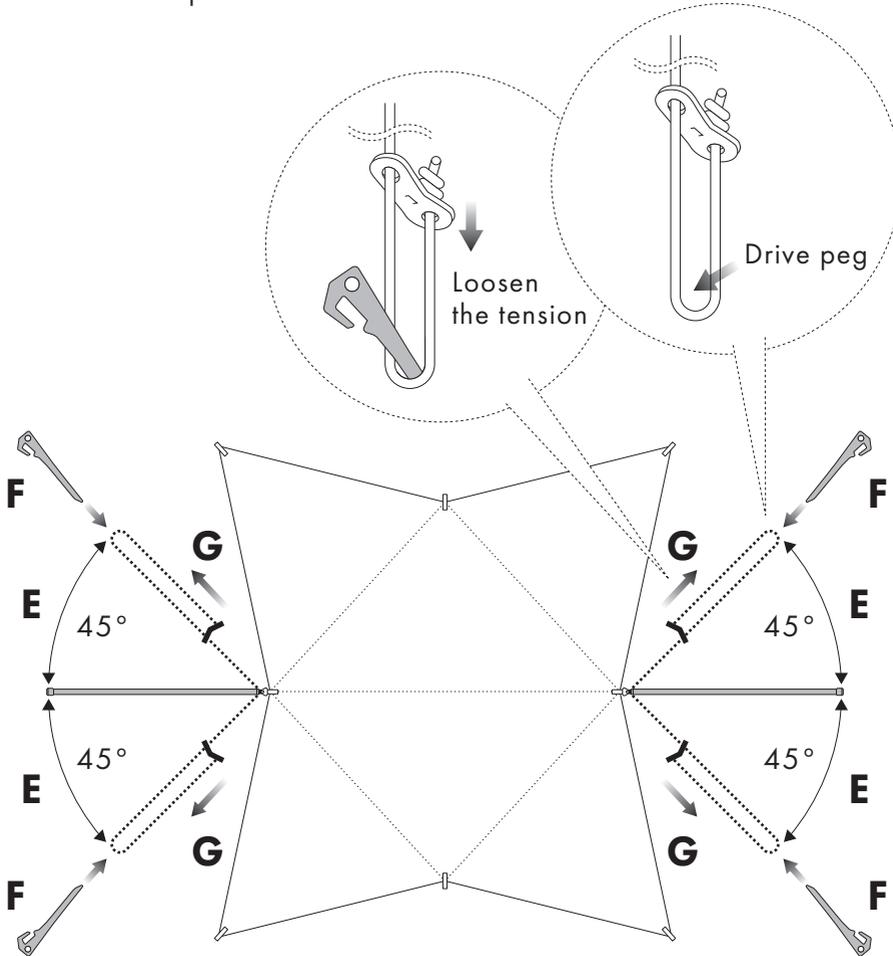


1 SETTING MAIL POLE

A: Pitch the main poles.

B: Adjust the tension of the 4 ropes to make the center line and poles straight.

C: When the main poles and ropes are set up you should see an isosceles triangle.

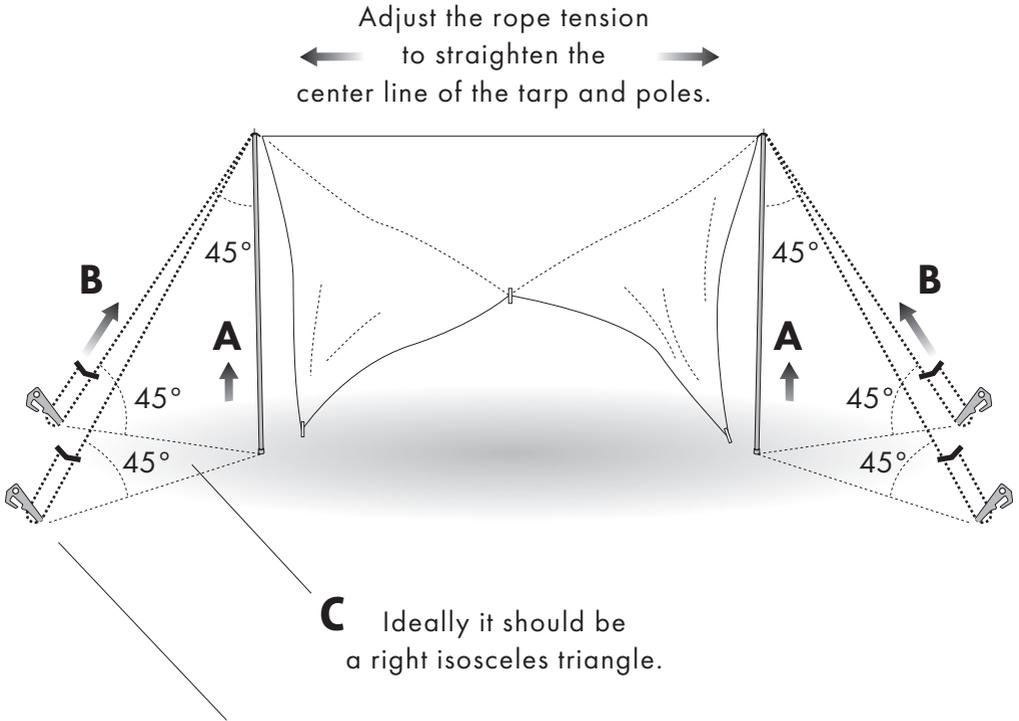

If you hammer the pegs in at a 45 degree angle the pegs will stay put.


2 SETTING SIDE POLE

A: Insert tip of the side poles into the grommets on the side of the body and loop 3m rope around the tip.

B: Drive tent pegs into the ground.

C: Adjust the tension of the ropes.

※Do the same for both sides.

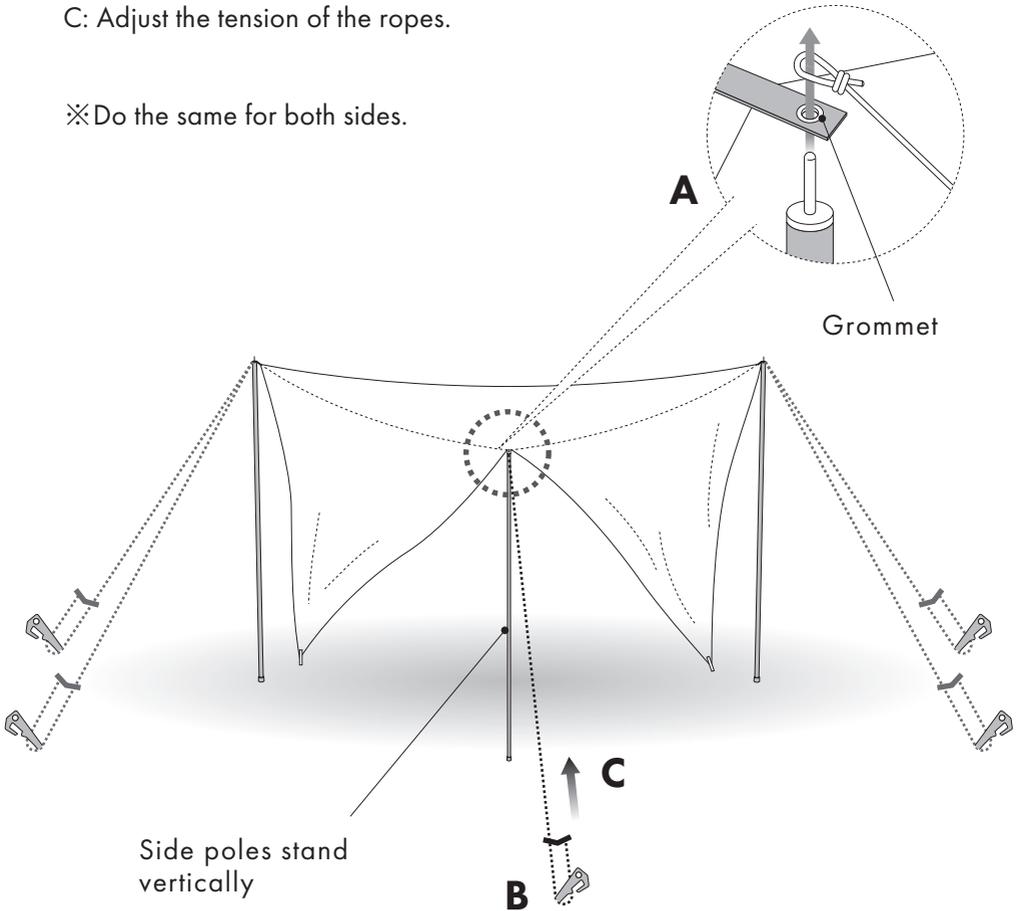


3 PEG DOWN THE 4TH CORNERS

A: Attach 3m ropes to the grommets on all 4 corners.

B: Drive tent pegs into the ground.

C: Adjust the tension of the ropes.

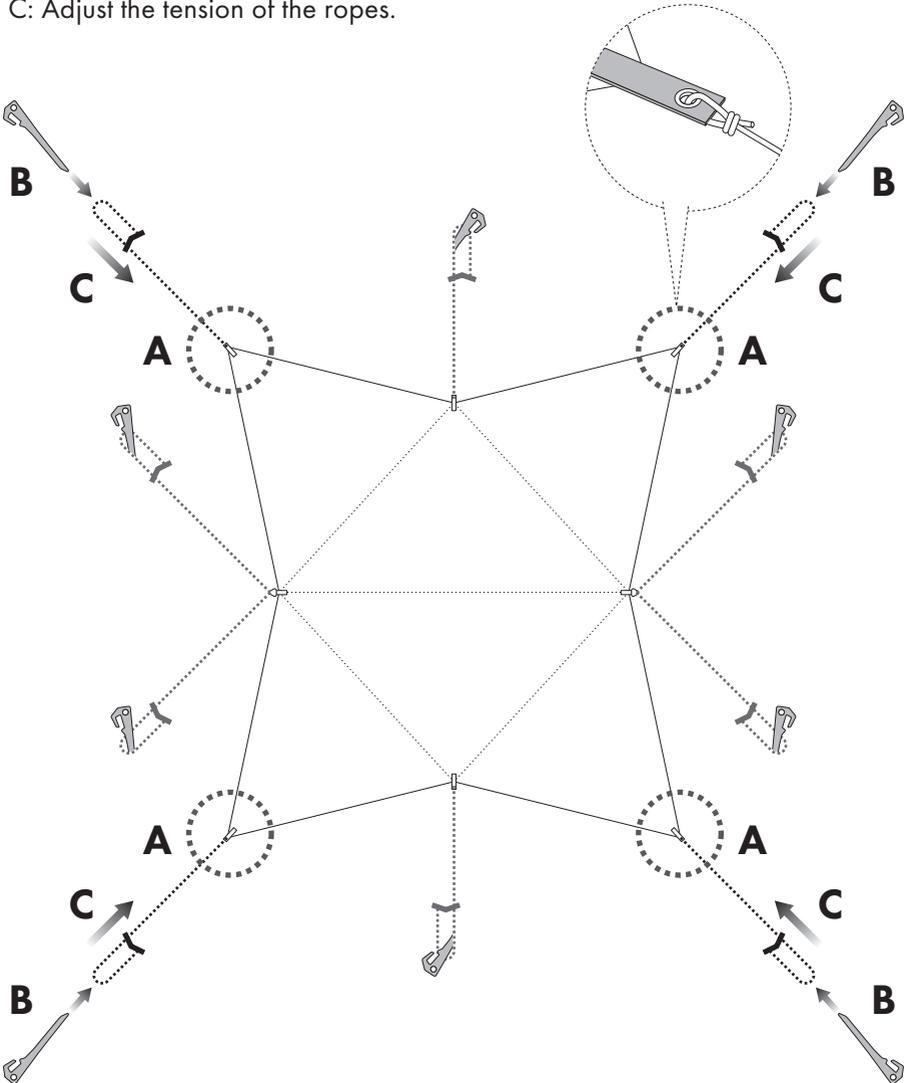

4 -1 SETTING TAPE TAIL


Use the Tarp Tail to set up close to another tent without It is a method to set your tent and tarp close to each other using the attached Tarp Tail.

A: Connect the Tarp Tail to the main body.

B: Insert the tip of the main pole into the grommet on the Tarp Tail and loop rope around the tip.

C: Set up your tent so the tarp overlaps it.

D: Adjust the tension on the webbing as needed.

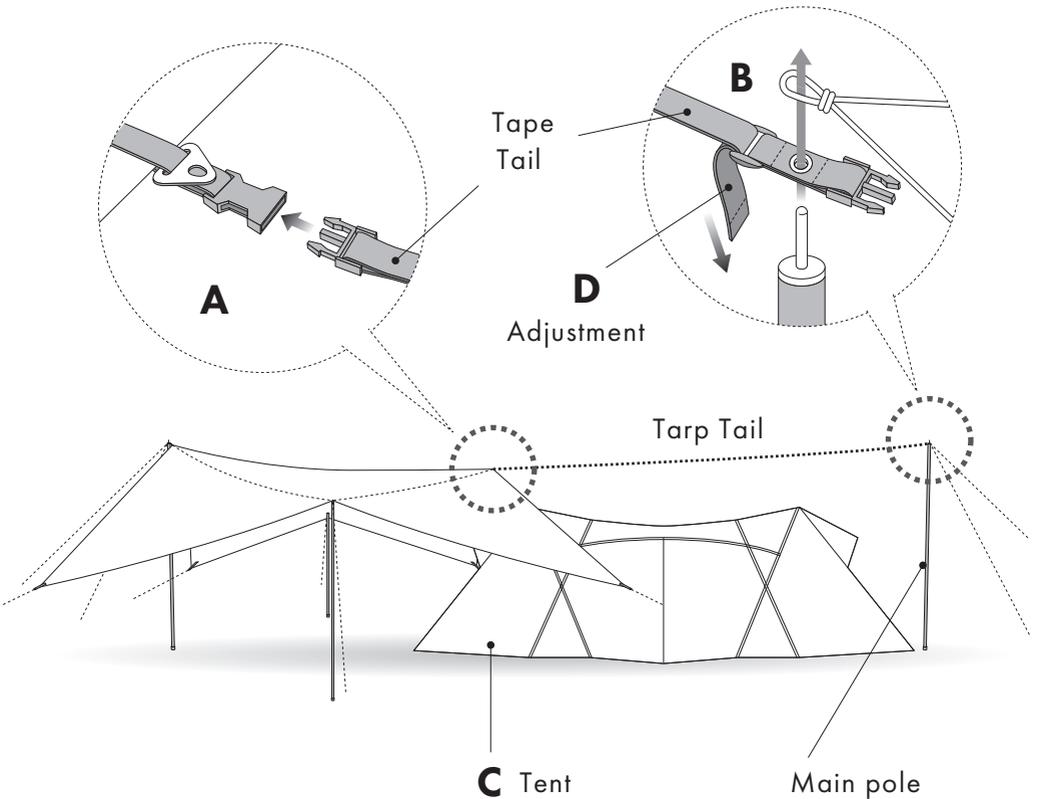


4 -2 SETTING TARP TAIL

If you don't use the Tarp Tail to set up a tent close to the tarp, the Tarp Tail can be used as a lantern hanger.

A: Connect the Tarp Tail along the inside of the tarp.

B: Adjust the tension on the webbing as needed.

C: Use one of the rings to hang a small battery-powered lantern or other accessories.

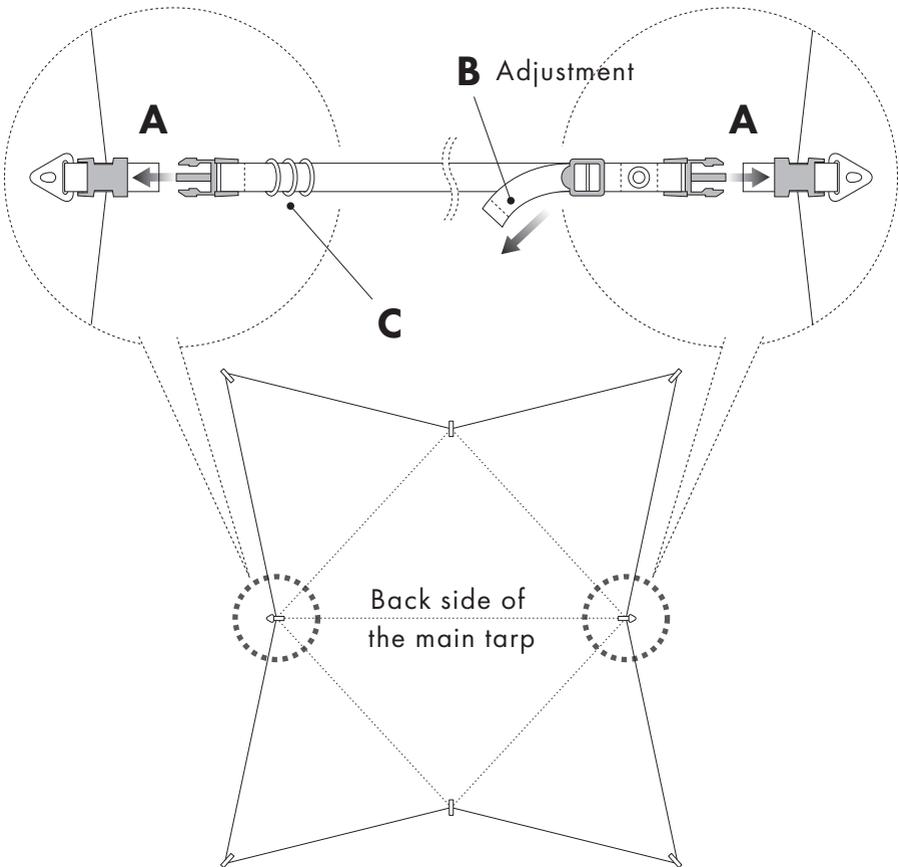

■ WARRANTY AND REPAIR

If you find any defects in the product, please contact the store where you purchased it or us directly. We will replace or repair any item found to have a manufacturing defect free of charge. We will repair products with damage caused by wear and aging at a reasonable price. Please note that it may be difficult to obtain some materials due to the discontinuation of products and parts, and repairs may not be possible based on the condition of the product.

※ When sending a product for repair, please remove dirt and moisture from the product before sending it. Moisture and dirt may interfere with repairs. Items that are not clean and dry upon arrival for repair will incur additional charges at their own expense for cleaning. Thank you for your understanding.

ZANE ARTS, Inc.

7190-2 Shimauchi, Matsumoto, Nagano 390-0851

Phone: 0263-87-2955 FAX: 0263-87-2966

info@zanearts.com